

Allsalt Shoxs X4 and X8

MOUNTING TEMPLATE


PLEASE REFER TO THE
INSTALLATION GUIDE
PROVIDED WITH THIS
TEMPLATE.

PLEASE REFER TO OPERATION & SERVICE MANUAL
FOR INSTALLATION AT <https://www.allsalt.com/downloads>

FOR ADDITIONAL PRODUCTS, TECHNICAL INFORMATION AND
ACCESSORIES, VISIT US ONLINE AT ALLSALT.COM

FOR ASSISTANCE, PLEASE CALL: 1.250.652.6003

TEMPLATE PRINTED ON 11IN. X 17IN. PAPER

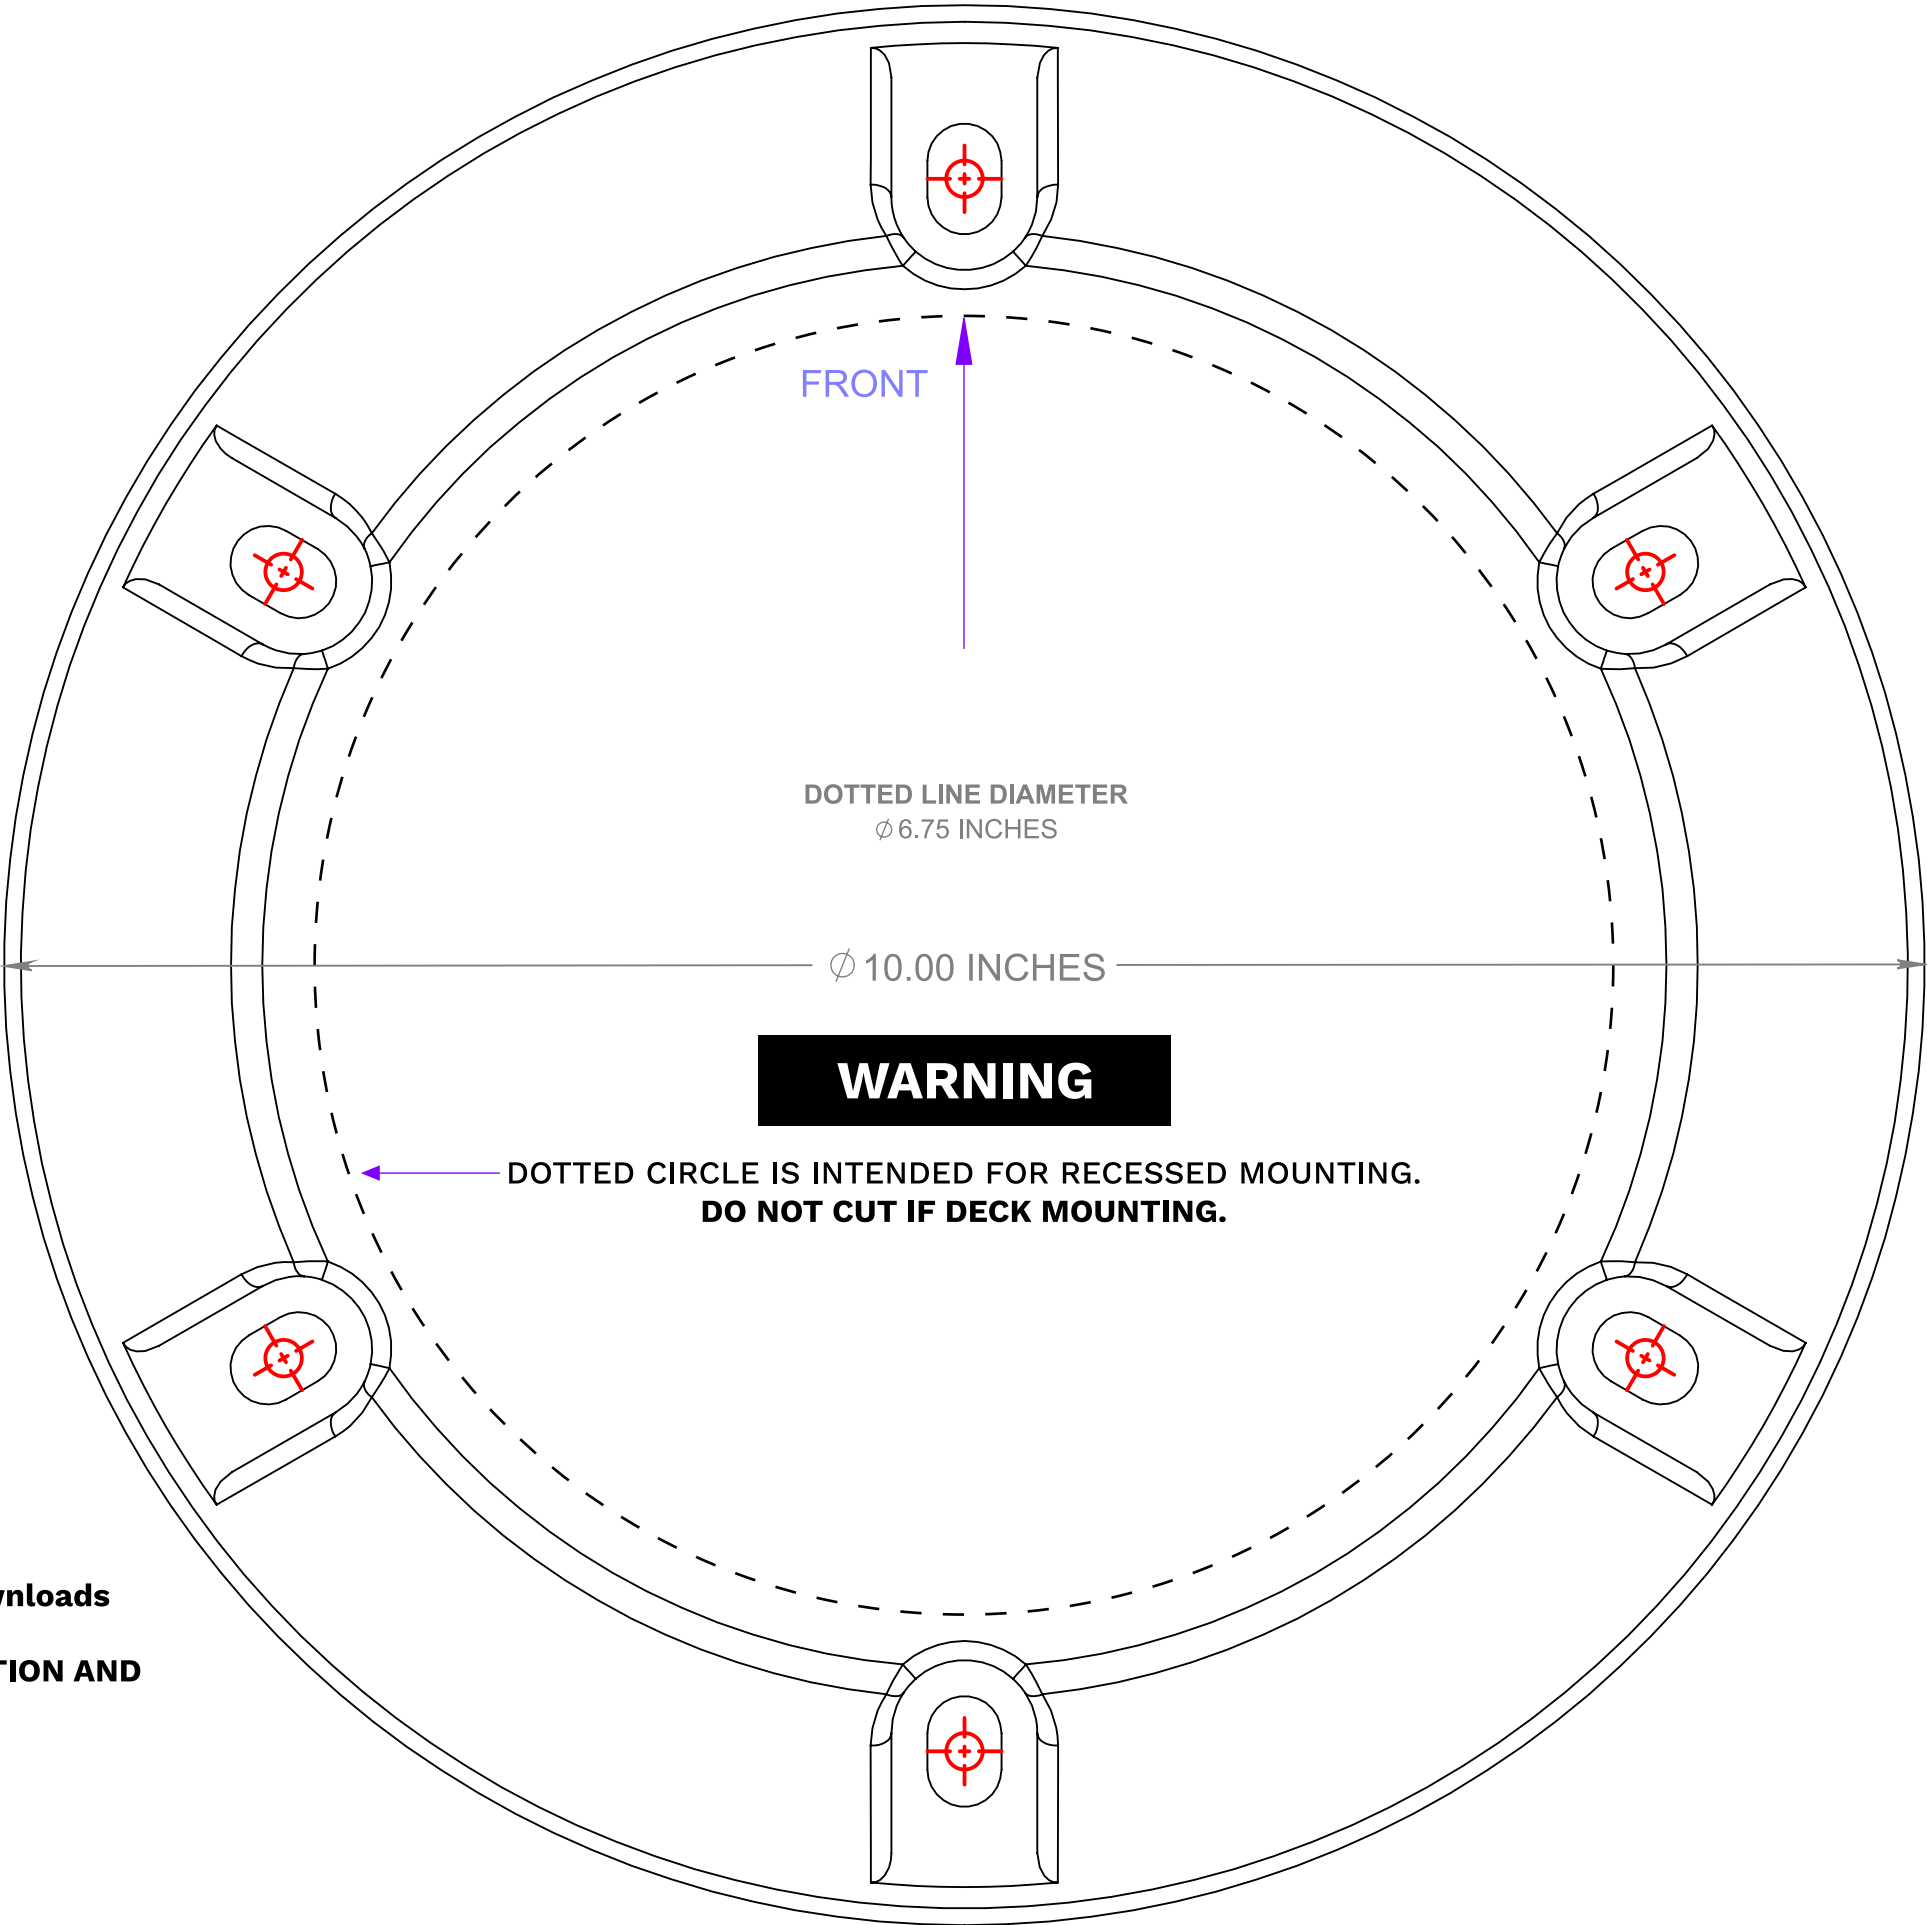

This document and its contents are proprietary and confidential to Allsalt Maritime Corporation or its subsidiaries and affiliates. Neither this document, nor any part of it may be disclosed or conveyed to, used or copied by or for any third party without the prior written consent of Allsalt Maritime Corporation. All rights reserved.

INSTALLATION GUIDE

This is meant to serve as a ‘quick start guide’ only. Refer to the Pedestal Operating and Service Manual for complete instructions.

TOOLS NEEDED

(1) Template

(1) Jigsaw

(6) Mounting fasteners 3/8”-16 UNC or 3/8”-24 UNF.**

(1) Drill with 3/8”

(1) 5/32” Allen Key


**FASTENERS NOT INCLUDED WITH PURCHASE

IMPORTANT: MUST COMPLETE THIS STEP PRIOR TO INSTALL

For both mounting styles, use the template to drill six (6) holes for fastener sizes 3/8”-16 UNC or 3/8”-24 UNF.

The Allsalt Shoxs X4 and X8 shock mitigating pedestals are designed to be installed two different ways, depending on the boat’s configuration and desired seat height.

MOUNT PEDESTAL

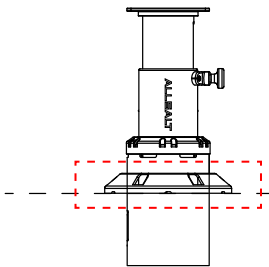


RECESS MOUNT

1A. If recess mounting, where a portion of the pedestal will be inside a box, or underneath the vessel’s deck, use the template and jigsaw to cut a 6 3/4” circular opening in the desired mounting location.

Set the desired height by adjusting the bottom flange upwards using the procedure found in the Operating and Service Manual.

IMPORTANT: The bottom flange must be properly torqued according to the procedure in the manual prior to use.

└ All fasteners should be installed with a medium-strength threadlocker such as Loctite® 243™

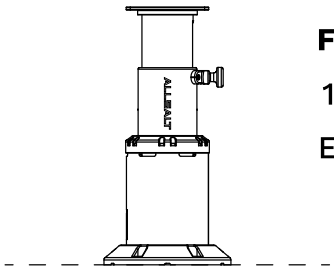

FLUSH MOUNT

1B. If flush mounting directly to the deck, All fasteners should be installed with a medium-strength threadlocker such as Loctite® 243™.

Ensure proper clearance underneath deck.

Install seat bucket and accessories, if not already integrated with pedestal.

SCHRADER VALVE FILL PORTS

BOTTOM FILL PORT

SIDE FILL PORT

BOTTOM OF PEDESTAL

SET AIR PRESSURE

NOTE: Ensure 1 of 2 fill ports are accessible.

- The pedestal’s factory air pressure setting is 85 psi. The O-Ring indicator on the pedestal shaft should be at or below the STATIC LIMIT when intended occupant is seated. If the indicator is above the static limit, increase the air pressure 5-10 psi at a time using a hand pump or air compressor with the **SCHRADER VALVE**.